


Installation Instructions for G-Frame 1 Pole/ 277 VAC Ground Fault Circuit Breaker

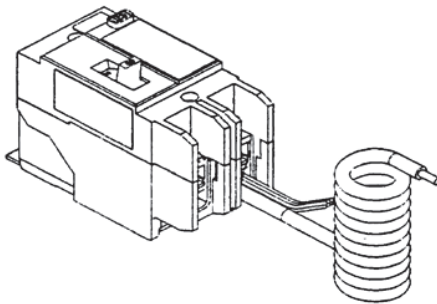

Contents

Description	Page
Introduction	2
Installation	3

**WARNING**

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN DEATH, PERSONAL INJURY OR PROPERTY DAMAGE. EATON IS NOT LIABLE FOR THE MISAPPLICATION OR MISINSTALLATION OF ITS PRODUCTS.

Introduction

The user is cautioned to observe all recommendations, warnings, and cautions relating to the safety of personnel and equipment, as well as, all general and local health and safety laws, codes, and procedures.

1. To be installed by a qualified electrician only.
2. Install ground fault circuit breaker on a single phase 277 VAC grounded power supply system only.

**WARNING**

TURN OFF POWER AT THE MAIN BREAKER BEFORE COMMENCING INSTALLATION. FAILURE TO DO SO WILL RISK ELECTRICAL SHOCK AND POSSIBLY DEATH, PERSONAL INJURY OR PROPERTY DAMAGE.

3. To latch the ground fault circuit breaker, move the handle firmly to the extreme "OFF" position.
4. Bolt the ground fault circuit breaker into the desired pole position (See Fig 1).
 - A. Connect the coiled, white "pigtail" wire from the ground fault circuit breaker to the panel or enclosure neutral bus terminal and secure tightly.
 - B. Connect the white (neutral) load wire to the terminal directly above the "pigtail".
 - C. Connect the black (hot) load wire to the remaining fault circuit breaker terminal.

5. Apply power to the system, turn to "ON".
6. If the breaker trips (handle moves to the center tripped position), remove loads from the circuit, one at a time. Try to energize the ground fault circuit breaker each time to see if it will reset and stay "ON". To reset, push the handle to the extreme "OFF" position and then to the "ON" position. When the ground fault circuit breaker can be reset, without tripping, check the last load for a faulty condition. Poor insulation, shorted wires, wet connections, wet conduit, a pinched or bunching neutral lead to a ground metal box and other faults can cause the safety features of the ground fault circuit breaker to open the circuit. Replace or repair the defective condition before using the device.
7. Testing the ground fault circuit breaker: Pressing the AMBER "TEST" button will thoroughly test all ground fault features. The breaker handle will move to the center position indicating ground fault protection. Test monthly in accordance with the recommendations of the Underwriters Laboratories, Inc.
8. After completion of the installation, attach the trim label (Style # 5655B68H02) to the panel. Give the test reminder card (Style # 5655B67H02) to the user or place in a conspicuous location to remind the user; to test the ground fault circuit breaker monthly.
9. 30 mA ground fault equipment protectors are **not** intended for ground fault protection of personnel coming in contact with electrical parts. They protect equipment from harmful leakage current only.

CAUTION: DO NOT REVERSE-FEED OR BACK-WIRE, AND DO NOT SUBJECT TO MEGGER, HIGH-VOLTAGE OR HIGH-POT TEST. REMOVE THE GROUND FAULT CIRCUIT BREAKER BEFORE HIGH POTTING OCCURS ON THE CIRCUIT OR THE SYSTEM.

Installation

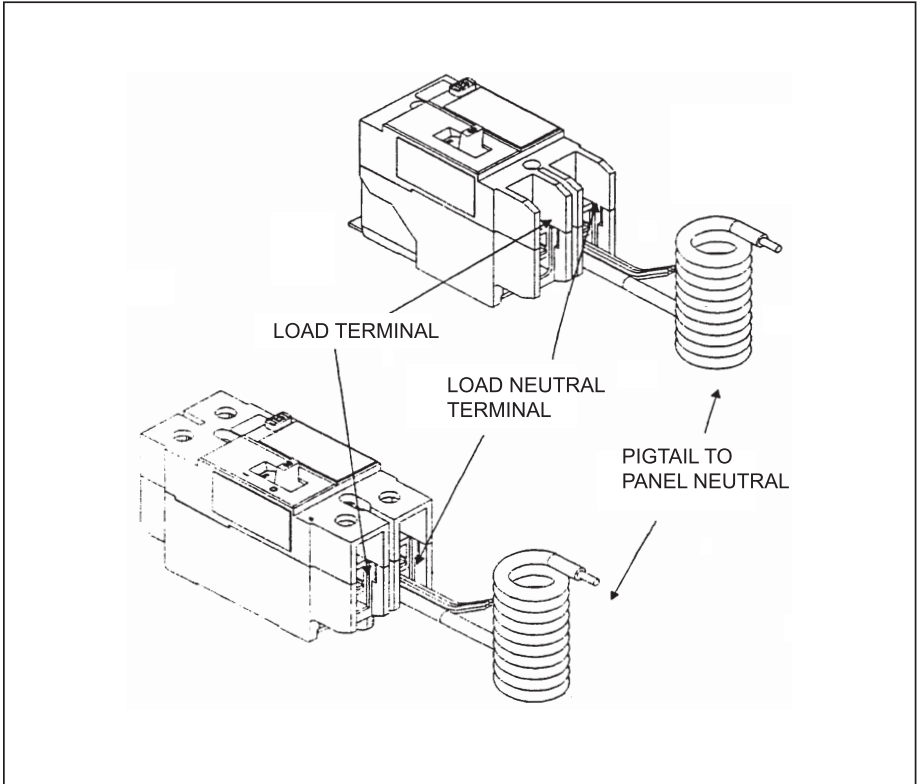


Figure 1. Ground Fault Circuit Breaker Connection Diagram.

The instructions for installation, testing, maintenance, or repair herein are provided for the use of the product in general commercial applications and may not be appropriate for use in nuclear applications. Additional instructions may be available upon specific request to replace, amend, or supplement these instructions to qualify them for use with the product in safety-related applications in a nuclear facility.

The information, recommendations, descriptions, and safety notations in this document are based on Eaton's experience and judgment with respect to Retrofitting of Power Breakers. This instructional literature is published solely for information purposes and should not be considered all-inclusive. If further information is required, you should consult an authorized Eaton sales representative.

The sale of the product shown in this literature is subject to the terms and conditions outlined in appropriate Eaton selling policies or other contractual agreement between the parties. This literature is not intended to and does not enlarge or add to any such contract. The sole source governing the rights and remedies of any purchaser of this equipment is the contract between the purchaser and Eaton.

NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY, OR WARRANTIES ARISING FROM COURSE OF DEALING OR USAGE OF TRADE, ARE MADE REGARDING THE INFORMATION, RECOMMENDATIONS, AND DESCRIPTIONS CONTAINED HEREIN. In no event will Eaton be responsible to the purchaser or user in contract, in tort (including negligence), strict liability or otherwise for any special, indirect, incidental or consequential damage or loss whatsoever, including but not limited to damage or loss of use of equipment, plant or power system, cost of capital, loss of power, additional expenses in the use of existing power facilities, or claims against the purchaser or user by its customers resulting from the use of the information, recommendations and description contained herein.

Eaton Corporation
Electrical Group
1000 Cherrington Parkway
Moon Township, PA 15108
United States
877-ETN-CARE (877-386-2273)
Eaton.com

© 2015 Eaton Corporation
All Rights Reserved
Printed in Dominican Republic
Publication No. IL29C193A/TBG000530
Part No. 8790C53H02
July 2015