

Enclosed control support


Enclosed control satellite product offering

- Type 1, 12, 3R, 4, 4X and 7/9 enclosures
- Non-combination starters
- Combination starters—non-fusible/fusible and circuit breaker
- Full voltage non-reversing, reversing and multi-speed
- Freedom™ (NEMA® Size 00–5) vacuum contactors, soft starters, lighting contactors
- Modifications including cover control, CPTs, auxiliary contacts, heaters and more

Eaton provides enclosed control solutions that are unmatched in the industry

- Local assembly and manufacturing capabilities
- Assembly and wiring of enclosed control
- Customized enclosed motor starting and lighting panels
- Modified pump panels
- Engineering support
- Custom AutoCAD® drawing capabilities
- Quick-ship capabilities
- Customer visits are welcome

Four regional satellites

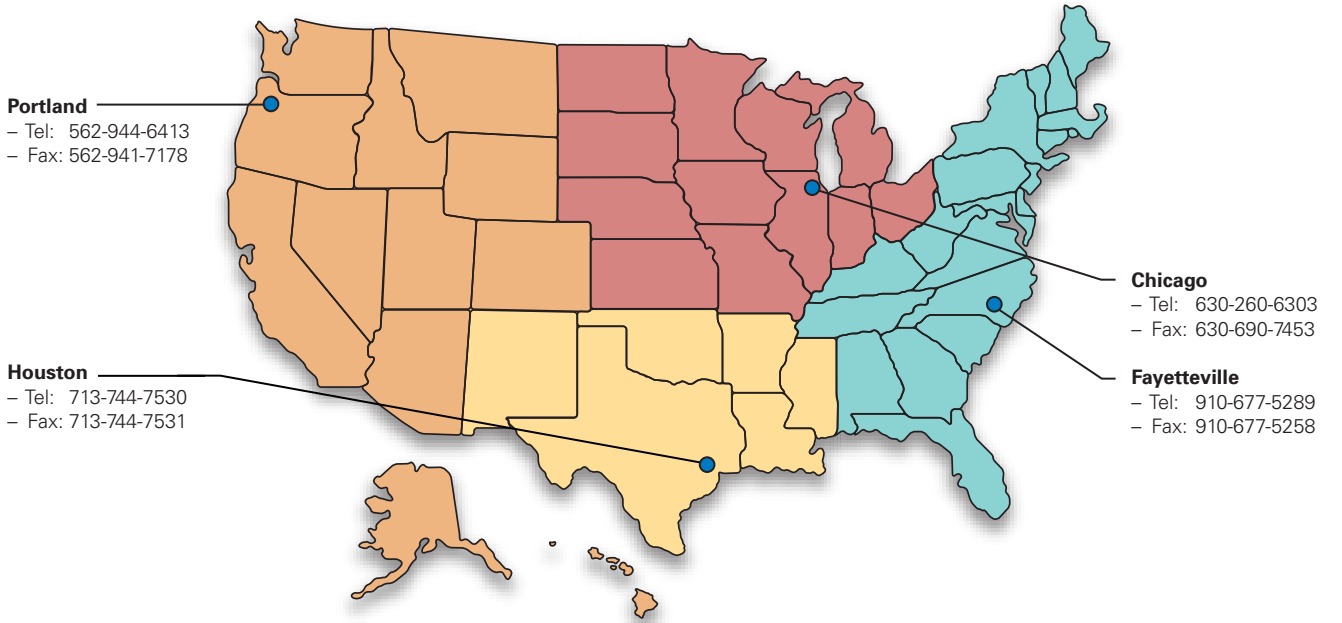

For Enclosed Control technical support, please contact Eaton's Technical Resource Center: 877-386-2273, option 2

At Eaton, we're energized by the challenge of powering a world that demands more. With over 100 years experience in electrical power management, we have the expertise to see beyond today. From ground-breaking products to turnkey design and engineering services, critical industries around the globe count on Eaton.

We power businesses with reliable, efficient and safe electrical power management solutions. Combined with our personal service, support and bold thinking, we are answering tomorrow's needs today. Follow the charge with Eaton. Visit eaton.com/electrical.

Pre-engineered packaged control


Enclosed control reference guide



Packaged control meets your motor control needs

From autotransformers and lighting contactors to reduced voltage and **XT** starters, enclosed control from Eaton can be part of the solution in project construction, OEM, and other electrical market applications because of its expansive product offering and custom capabilities.

Project construction offers a key marketplace for enclosed control in wastewater, pumping and HVAC applications. OEMs can also take advantage of the wide variety of enclosed control products, as well as the availability of custom control solutions.

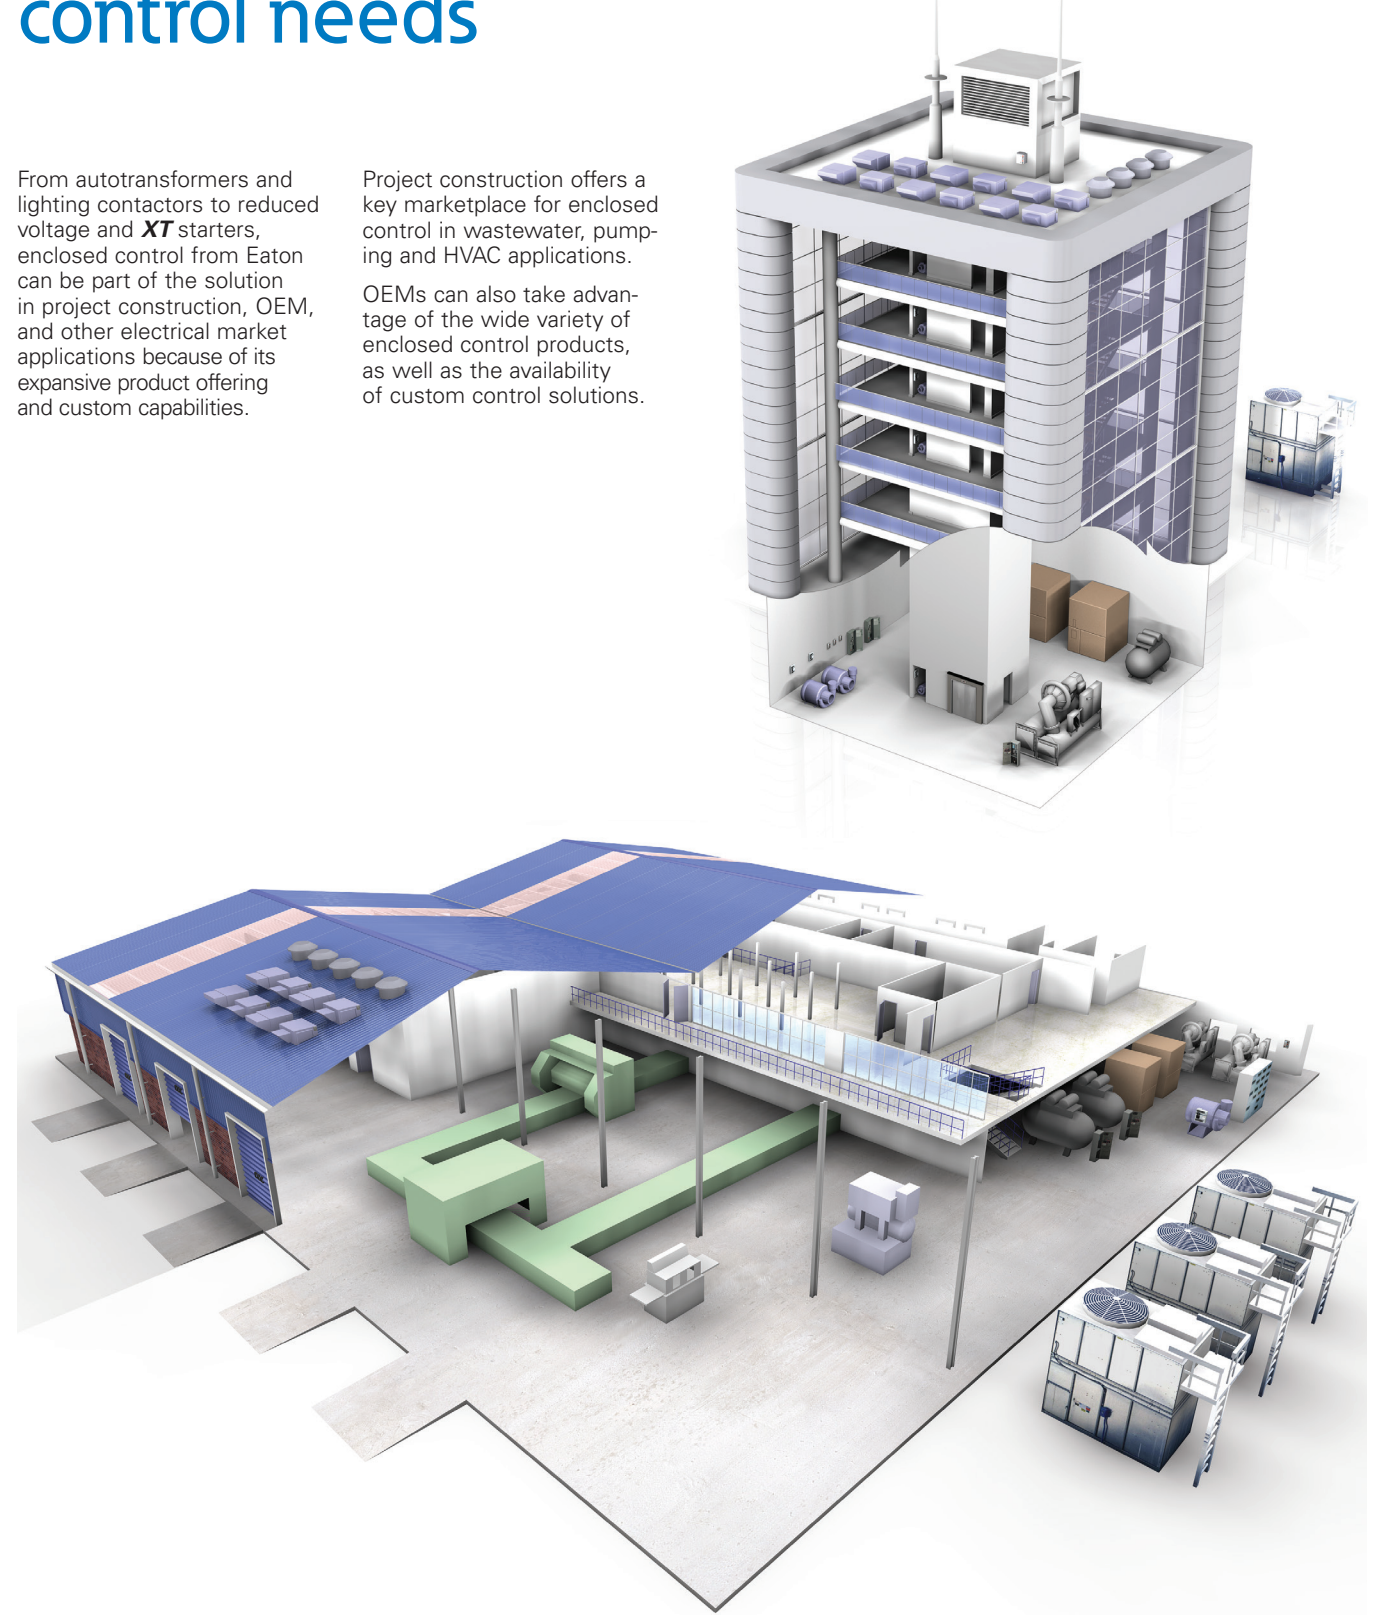


Eaton
1000 Eaton Boulevard
Cleveland, OH 44122
United States
Eaton.com

© 2017 Eaton
All Rights Reserved
Printed in USA
Publication No. SA03311001E / MSC
April 2017

Eaton is a registered trademark.
All other trademarks are property of their respective owners.




NEMA®

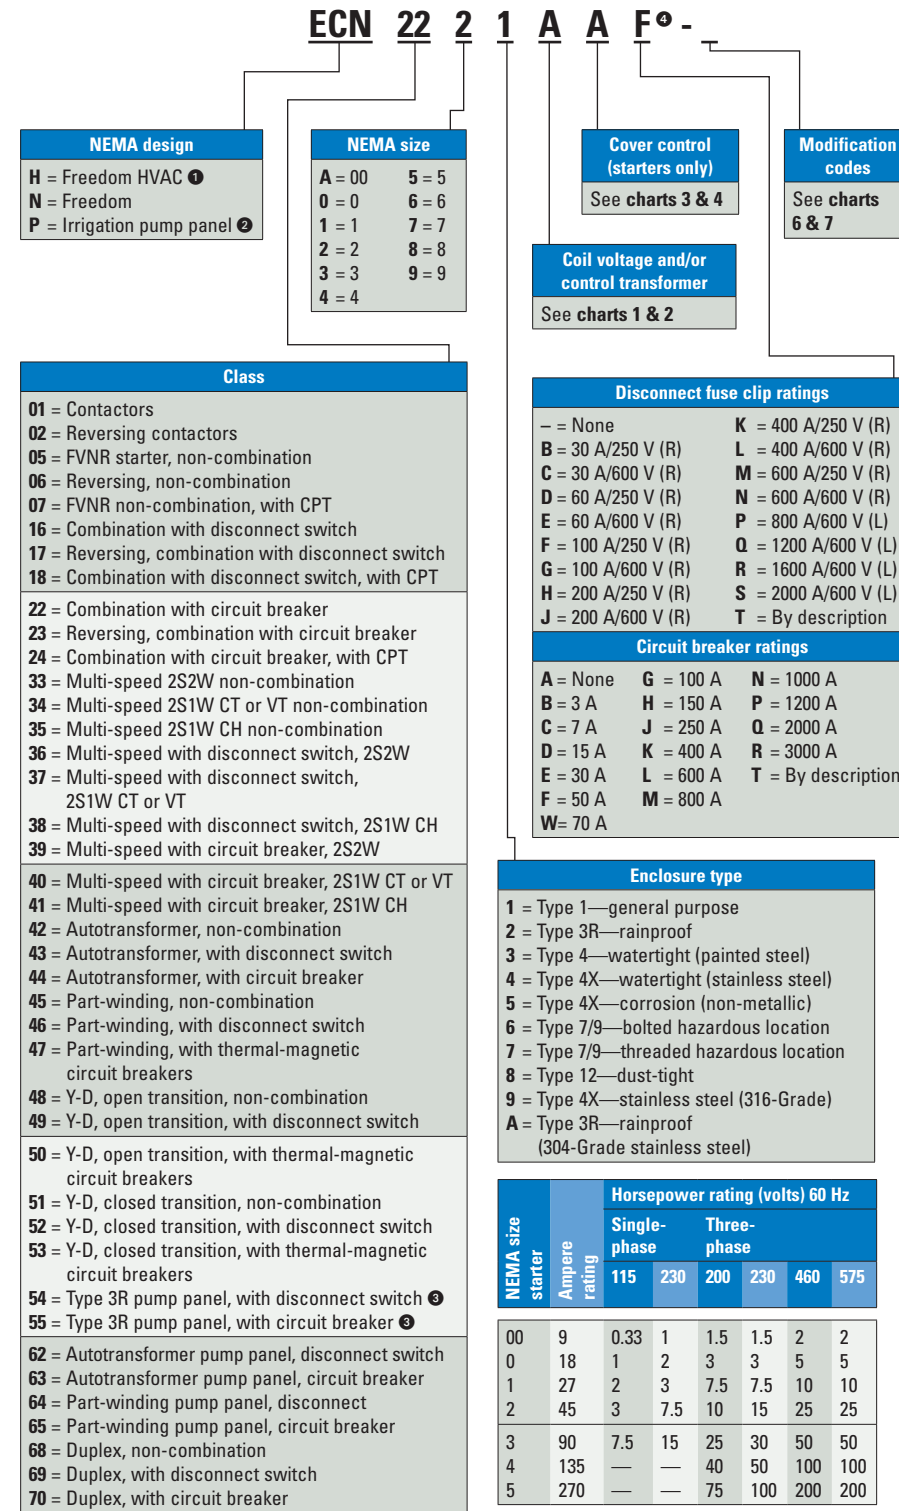


- ① See Freedom HVAC starters catalog numbering system.
- ② ECP irrigation pump panels valid with Class 54, 55 only.
- ③ Pump panels standard options included: NEMA Type 3R, Start PB, HOA selector switch.
- ④ For non-combination contactors and starters, include the letter **(A)** as the 10th character.

IEC

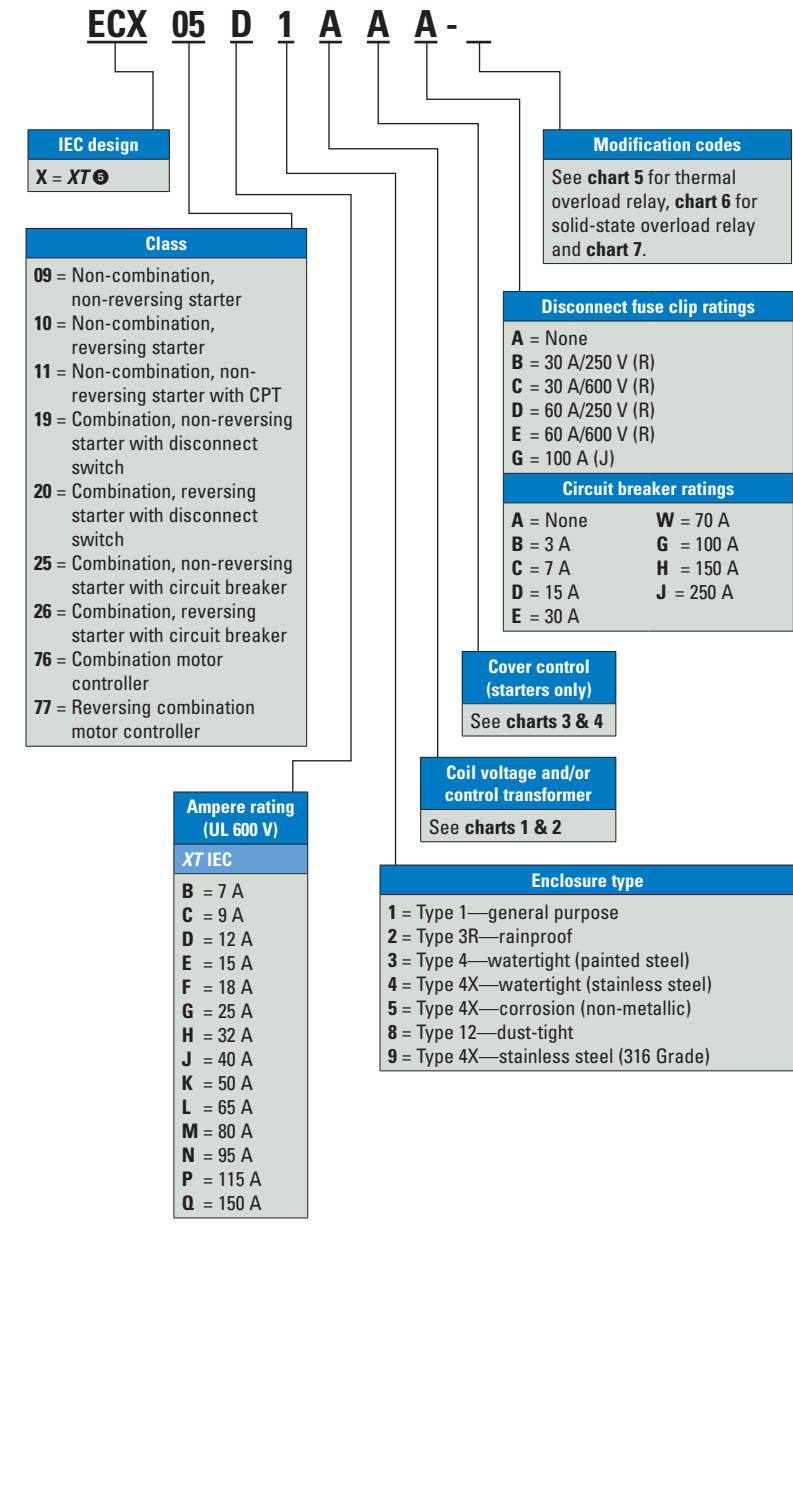


- ⑤ For **XT** IEC starters, add an 11th character for the corresponding overload selection.

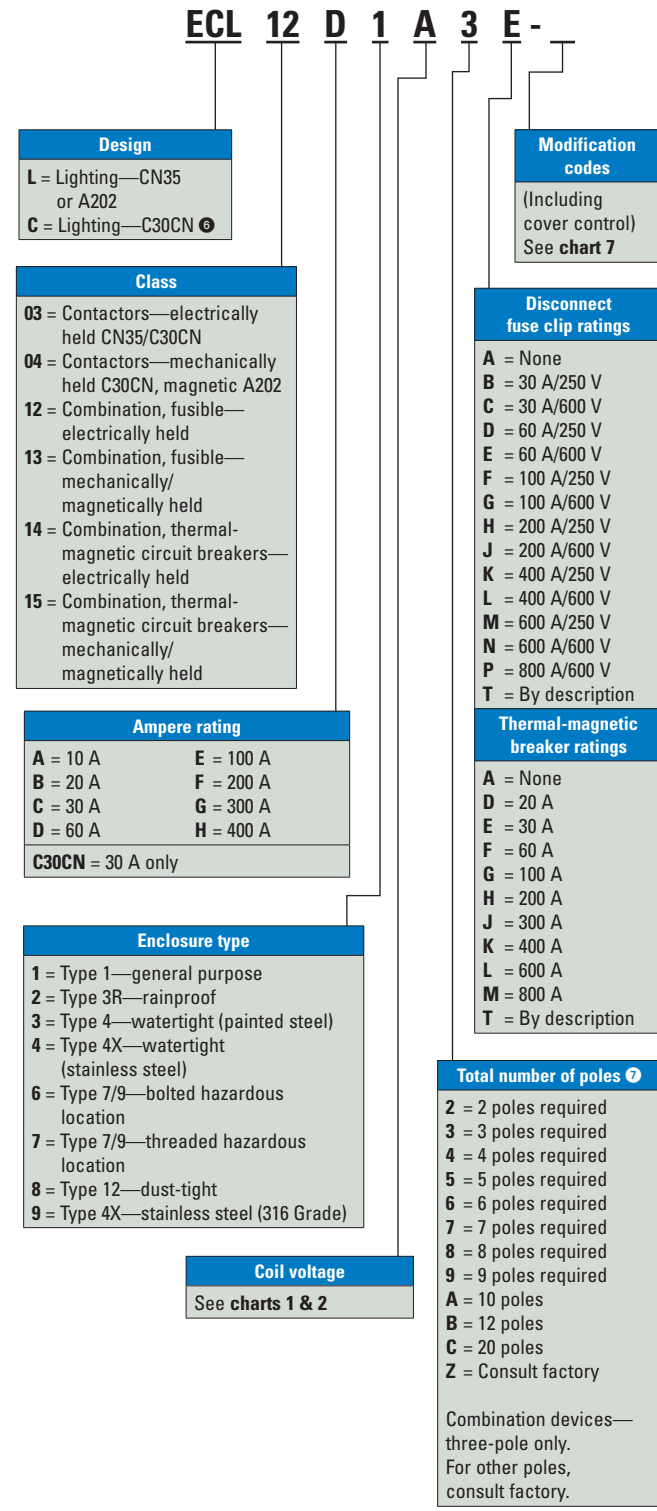

⑥ C30CN = 30 A only.

Enclosed control solid-state soft starters

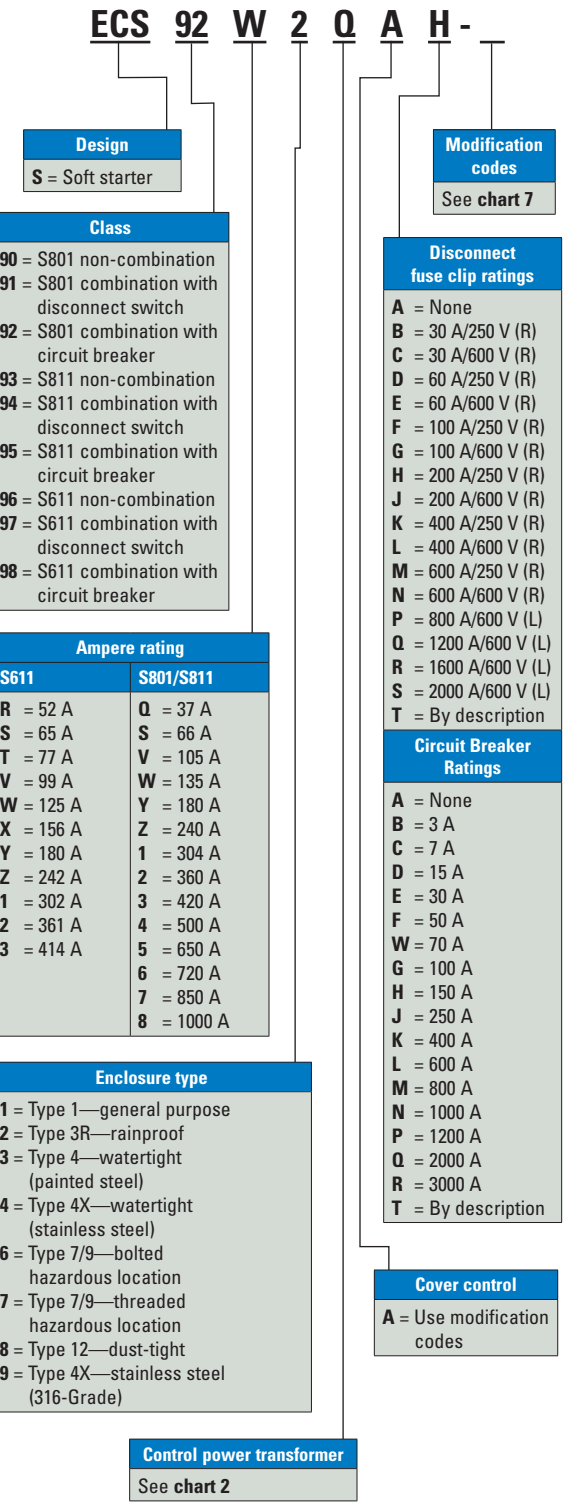

⑦ For NC poles on ECC product, see modification codes.

Freedom HVAC starters

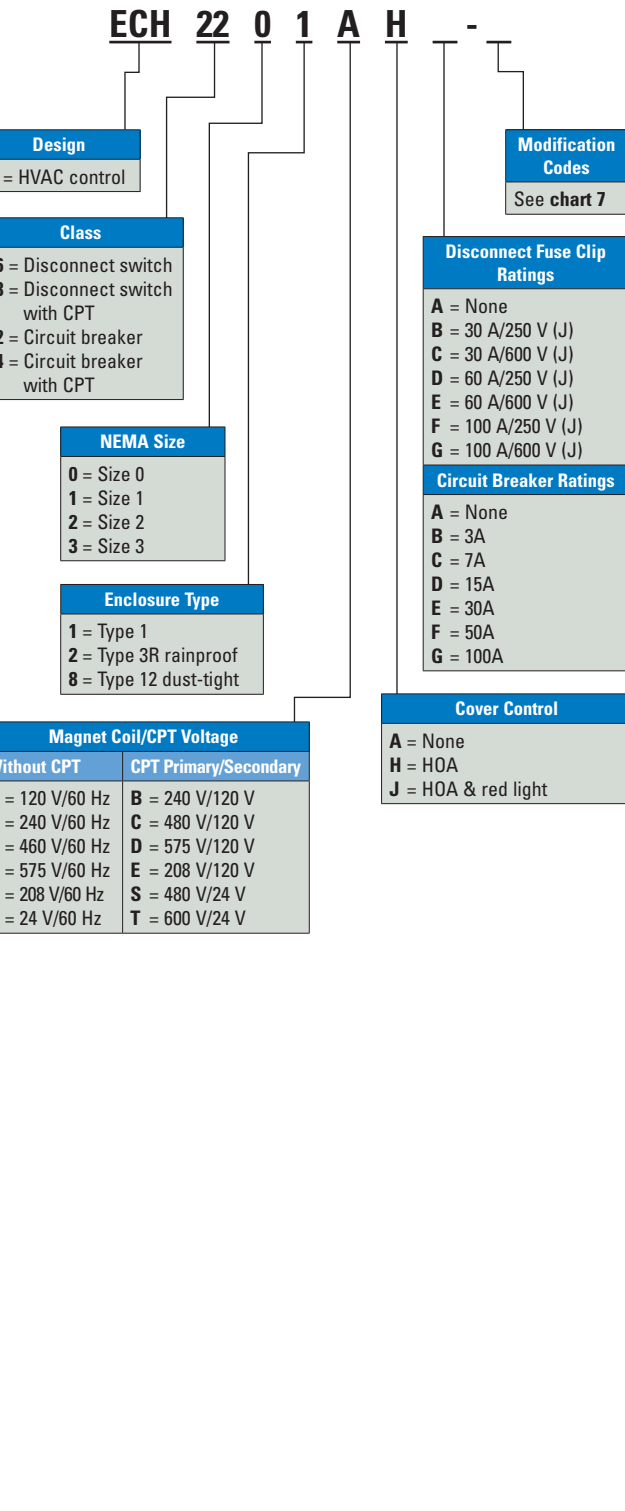


Chart 1: Magnet coil codes (system voltage) ⑧

A = 120/60 110/50	K = 240/50	U = 24/50
B = 240/60 220/50	L = 380/50	V = 32/50
C = 480/60 440/50	M = 415/50	W = 48/60
D = 575/60 550/50	P = 12 Vdc	X = 104–120/60
E = 208/60	Q = 24 Vdc	Y = 48/50
G = 550/50	R = 48 Vdc	Z = By description
H = 277/60	S = 120/125 Vdc	
J = 208–240/60	T = 24/60	

Chart 2: Control power transformer codes (system voltage)

Code	Primary	Secondary
B	240/480–220/440 wired for 240	120/60–110/50
C	240/480–220/440 wired for 480	120/60–110/50
D	575/60–550/50	120/60–110/50
E	208/60	120/60
H	277/60	120/60
K	380/415 V	220 V
L	380/50	110/50
M	415/50	110/50
P	120/60	24
Q	208/60	24
R	240/480–220/440 wired for 240	24
S	240/480–220/440 wired for 480	24
T	575/60	24
U	277/60	24
V	380/50	24
W	415/50	24
X	240/480/600 wired for 480	120
Y	240/480/600 wired for 480	24
Z	By description	—

Chart 3: Cover control—non-reversing ⑨

A = None	B = Start/Stop pushbuttons	C = Start/Stop pushbuttons, run (R) pilot light	D = Start/Stop pushbuttons, run (R), Off (G) pilot lights	E = On/Off pushbuttons	F = On/Off pushbuttons, run (R) pilot light	G = On/Off pushbuttons, run (R), Off (G) pilot lights	H = Hand/Off/Auto selector switch
J = Hand/Off/Auto selector switch, run (R) pilot light	K = Hand/Off/Auto selector switch, run (R), Off (G) pilot lights	L = Start pushbutton	M = On pushbutton	N = Off pushbutton	P = Run-Red pilot light	Q = Off-Green pilot light	R = Run (R)—Off (G) pilot lights
S = Start/Stop selector switch	T = Start/Stop selector switch, run (R) pilot light	U = Start/Stop selector switch, run (R), Off (G) pilot lights	V = On/Off selector switch	W = On/Off selector switch, run (R) pilot light	X = On/Off selector switch, run (R), Off (G) pilot lights	Y = On/Off selector switch, run (R), Off (G) pilot lights	Z = By description

Chart 4: Cover control—reversing K ⑩

A = None	B = Forward/Reverse/Stop pushbuttons	C = Forward/Reverse/Stop pushbuttons, 2 red pilot lights	D = Forward/Reverse/Stop pushbuttons, 2 red, 1 green pilot lights	E = Up/Stop/Down pushbuttons	F = Up/Stop/Down pushbuttons, 2 red pilot lights	H = Forward/Off/Reverse selector switch	J = Forward/Off/Reverse selector switch, 2 red pilot lights
K = Forward/Off/Reverse selector switch, 2 red, 1 green pilot lights	P = 2 red pilot lights	Q = 1 green pilot light	R = 2 red, 1 green pilot lights	V = Open/Off/Close selector switch	W = Open/Off/Close selector switch, 2 red pilot lights	X = Open/Off/Close selector switch, 2 red, 1 green pilot lights	Z = By description

Chart 5: XT thermal overload relays

FLA Ratings	Size B–E 7–15 A	Size F–H 18–32 A	Size J–L 40–65 A	Size M–N 80–95 A	Size P–Q 115–150 A
0.1–0.16	A	A	—	—	—
0.16–0.24	B	B	—	—	—
0.24–0.4	C	C	—	—	—
0.4–0.6	D	D	—	—	—
0.6–1	E	E	—	—	—
1–1.6	F	F	—	—	—
1.6–2.4	G	G	—	—	—
2.4–4	H	H	—	—	—
4–6	I	I	—	—	—
6–10	J	J	J	—	—
9–12	K	—	—	—	—
12–16	L	L	L	—	—
16–24	—	M	M	—	—
24–32	—	N	N	—	—
24–40	—	—	P	—	—
25–35	—	—	—	S	S
35–50	—	—	—	T	T
40–57	—	—	Q	—	—
50–65	—	—	R	—	—
50–70	—	—	—	U	U
70–100	—	—	—	V	V
95–125	—	—	—	—	W
120–150	—	—	—	—	X

Chart 6: Modification codes—solid-state overload for NEMA (Freedom) and IEC (XT) starters

IEC size ⑪	NEMA size	Full Load current adjustment range (A)	Three-Phase Without Ground Fault Auto/Manual Reset Overload	Three-phase with ground fault auto/manual reset overload
B & C	00	1–5	R63/B	R64/B
C & D	0 & 1	4–20	R63/C	R64/C
		1–5	R63/B	R64/B
D	2	4–20	R63/C	R64/C
		9–45	R63/D	R64/D
D	2	9–45	R63/D	R64/D
D, F & G	3	20–100	R63/E	R64/E
N/A	4	28–140	R63/F	R64/F