

# EVO2376 LIGHTING FIXTURES

## INCANDESCENT FOR ORDINARY LOCATIONS


### Installation & Maintenance Information

**IF 1555**

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE**

#### INSTALLATION

1. Remove pendant assembly.
2. Install pendant assembly on conduit fig. 1.
3. Tighten set screw in pendant hub to secure pendant to conduit.
4. Attach field wiring to medium base receptacle terminal screws.
5. Install hood assembly on pendant assembly.
6. Tighten set screw at top of hood to secure hood to pendant assembly
7. Install proper lamp in lamp holder.
8. Install glass assembly on hood
9. Tighten set screw located in glass assembly.
10. Turn power on

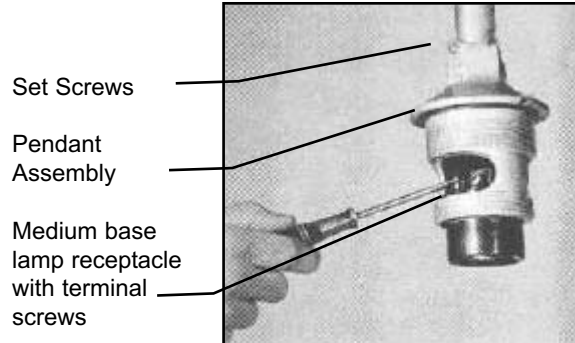

**⚠ WARNING**  
To avoid the risk of fire, explosion, or electric shock, this product should be installed, inspected, and maintained by a qualified electrician only, in accordance with all

**⚠ WARNING**  
To prevent glass shattering, avoid scratching or chipping the tempered glass

**⚠ WARNING**  
To avoid electrical shock, be certain that power is **OFF** before starting installation

#### GROUNDING

A grounding wire is installed as shown below.

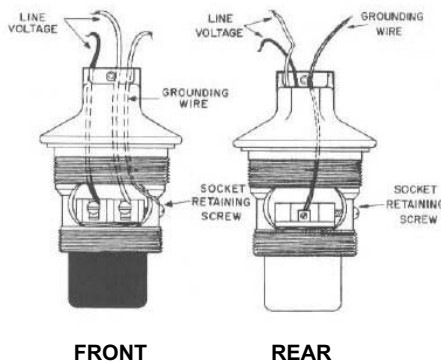


Fig. 3

**EVO2376 can be mounted with ARB662 with CGB296 (see fig. 2)**

#### MAINTENANCE

- Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine this. However, it is recommended that checks be made at least once a year. We recommend an Electrical Preventive Maintenance Program as described in the National Fire Protection Association Bulletin NFPA No. 70B: Recommended Practice For Electrical Equipment Maintenance ([www.nfpa.org](http://www.nfpa.org)).
- The glass should be cleaned periodically to insure continued lighting performance. To clean, wipe glass with a clean damp cloth. If this is not sufficient, use a mild soap or a liquid cleaner such as Collinite NCF or Duco #7. Do not use an abrasive, strong alkaline, or acid cleaner. Damage may result.
- Electrically check to make sure that all connections are clean and tight.
- Mechanically check that all parts are properly assembled.

#### WIRING RECOMMENDATIONS

Please follow wiring methods that comply with NEC and any local codes

**Available Wattage: 60 WATT**  
**Available Wattage: 75 WATT**  
**Fixture Input Voltage: 120 VAC**

All statements, technical information and recommendations contained herein are based on information and tests we believe to be reliable. The accuracy or completeness thereof are not guaranteed. In accordance with Crouse-Hinds "Terms and Conditions of Sale", and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his intended use and assumes all risk and liability whatsoever in connection therewith.