


- Product luminaires comply with EN60598 and are suitable for use in normal interior conditions.
- This luminaire has an ambient temperature range of -25°C to 25°C

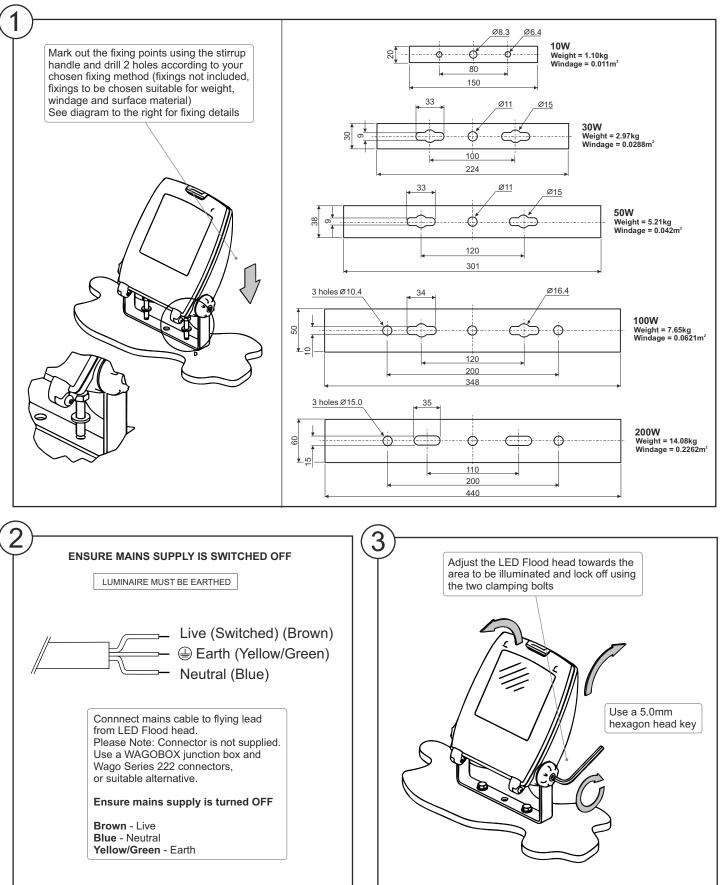

## PIR Module (Selctive models only)- Set Up

This product is an energy saving device and can be set to suit application. It is recommended that the installing engineer makes the adjustments during initial installation. This luminaire incorporates a discrete mini PIR on the front of the floodlight. The operation and sensitivity of this occupancy detector can adjusted and set as follows:

- With all connections made safely in accordance to current wiring regulation and with the rear enclosure cover removed turn on the floodlight.
- The luminaire should blink 1 to 3 times. This is perfectly normal as the detector is acclimatising to it's environment.
- Inside the rear adaptable enclosure there is a module with a series of dip-switches. These can be set to operate and change the sensitivity of the PIR device.
- Lux, time-delay and detection distance can all be set.

#### Functions / Sensor

The word SENSOR is situated to the left hand side of the module and working towards the right, the following selectors are explained.

- 1) Lux (This detects day or night dip-switch down)
- (Only works at below 30 lux dip-switch up) caution avoid shaded areas
- 2) Distance 4 metre (dip-switch down) or 8 metre (dip-switch up)
- 3) 8 seconds Time on after PIR detection
- 4) 1 Minute Time on after PIR detection
- 5) 3 Minutes Time on after PIR detection
- 6) 5 Minutes Time on after PIR detection

# PLEASE NOTE:

Time dip-switches in the up position denote function selected.

When switches (3, 4, 5 & 6) are switched off the luminaire stays illuminated (Sensor disabled).

### IMPORTANT

After installation, test all functions. Walk test you can test during the day provided you switch off selector dip-switch No. 1 Replace waterproof cover carefully after final setup.

#### Do's and Don'ts

Do not install near timed light sources or in shaded areas as the PIR / light sensor could be inadvertently triggered Avoid installing near to air streams or air conditioning outlets

Do not cover the device


## **Safe Operation**

- 1. To prevent damage to driver, do not mix with conventional magnetic ballasts on the same electrical circuit.
- 2. Check the rating label for voltage and frequency before connecting this luminaire to the electrical supply.
- 3. Ensure that the mains supply is switched off when working on this luminaire, whether installing or carrying out any other servicing.
- 4. Do not mount luminaire on or close to readily flammable materials.
- 5. Where use in more onerous situations is required, e.g. In part-completed buildings before "drying-out" is completed, or areas where ambient
- temperatures are outside the normal temperature range, then consult our Sales Office.
- 6. The light output of the product may cause injuries to human eyes in circumstances where the product is viewed directly with unshielded eyes for more than a few seconds.


### Servicing and Disposal


- 1. At commissioning and handing over of installation, ensure that a copy of these instructions is presented to the authority responsible for the operation and maintenance of the luminaries.
- 2. Servicing, e.g. cleaning, must only be carried out after the electricity supply has been switched off. It must not be assumed that luminaries with lamps not lit are switched off-always check before servicing.
- 3. Cleaning should be carried out at regular intervals to ensure that dirt does not accumulate to an extent that will impair the thermal safety or optical performance of the luminaire. Regular cleaning will also ensure that the optical performance of the luminaires is maintained.
- 4. Avoid touching the LED array surface. To clean Blow surface with either dry air or nitrogen gas.
- 5. At the end of life the luminaire is classed as WEEE under directive 2002/96/EC and should be disposed of in accordance with local legislation.

## Luminaire Cleaning



### End of Life and Components Disposal



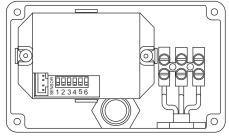

PIR Sensor Housing with cover removed