

# HALOHOME™

SMART LED MOTION FLOODLIGHT

Simple. Secure.



Bluetooth®



Motion Floodlight

**EATON**®

[eaton.com/halohome](http://eaton.com/halohome)

# HALO HOME™

## SMART LED MOTION FLOODLIGHT

Simple. Secure.

### 1 Install the Smart LED motion floodlight in your desired location. (See enclosed instructions sheet.)

- Light blinks once and then dims to indicate it is ready to be added (“claimed”) to the Halo Home app. On subsequent power cycles it will blink twice until it has been claimed.
- The blue LED indicator on the bottom of the motion sensor will blink continuously, indicating it is also ready to be claimed.

**Caution:** Do not install this LED motion floodlight to standard dimmers. Only the Halo Home Accessory Dimmer may be used.


**Note:** If you already have the Halo Home app and an active account, skip to step 4.

### 2 Download the HALO Home app to your smart mobile device.



### 3 Create a user account and validate via email

1. Enter your email address as your user account name.
2. Select a password containing at least 8 characters.

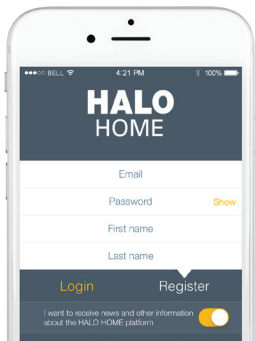

### 4 Adding the floodlight to the app

*Note:* This product contains a smart LED floodlight and a smart motion sensor; each can be controlled separately and associated with separate devices. Therefore, each needs to be claimed separately.


*Note:* For this step, your motion floodlight must be installed and powered, and your smart mobile device must be within range.

1. Press "+" at the top right of your screen to add the floodlight.
2. The app will search for your floodlight.
3. Once discovered, select the floodlight and press "Done." It may take up to 30 seconds for this process to complete.
4. Once complete, the floodlight will blink once to indicate it has been claimed.





## 5 Adding the motion sensor to the app

1. From the Devices or Controllers screens, press “+” at the top right of your screen.
2. The app will search for your motion sensor.
3. Once discovered, select the motion sensor and press “Done.” It may take up to 30 seconds for this process to complete.
4. Once complete, the blue LED indicator on the bottom of the motion sensor will blink twice and then remain on to indicate it has been claimed.

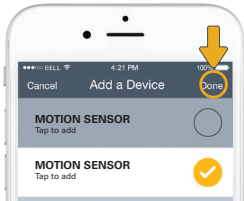

## 6 Associate the motion sensor to Halo Home devices

1. The Controller Settings screen will appear for your motion sensor. Press “Associate” or “Tap to select.”
2. Select the Device or Group to be controlled by your motion sensor and press “Save.”

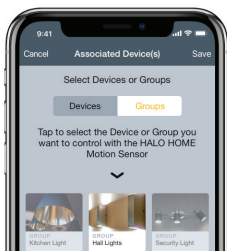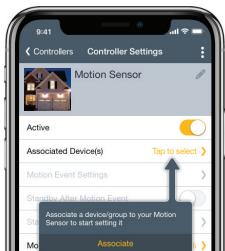


**Note:** Only one Device or Group can be selected. To control multiple Devices, create a Group from the “Groups” screen in the main menu, then return to the Controller Settings screen to associate the motion sensor to that group.

## 7 Adjusting the settings on your motion sensor

1. Edit the name of your motion sensor
2. Activate or deactivate your motion sensor. Turning this off deactivates the sensor, allowing you to control the floodlight or other associated devices manually.
3. Change which Halo Home devices are controlled by the motion sensor.
4. Define how the associated device or group reacts to a motion event, and for how long.
5. Activate or deactivate Standby: how a device reacts once the duration time has expired after a motion event.
6. Define how the associated device or group reacts in Standby mode, and for how long.
7. Set the sensitivity level of the motion sensor.
8. Set the sensitivity level of the photocell within the motion sensor.

**Note:** Be sure to press **"Save"** after making changes to the settings to ensure any changes are retained.

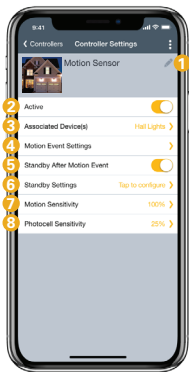

### Motion Event and Standby Settings


1. Dimming: Set the dim level activated by a motion event. The LED floodlight can dim from 100% to 5%.
2. Color Tuning: Set the color temperature (CCT) activated by a motion event, or select one of the presets. The LED floodlight has a CCT range of 3000K to 5000K.
3. Duration: Set the length of time these settings will remain in effect when motion is detected.

**Note:** This countdown timer continually resets as additional motion events occur.



## Motion Sensitivity and Test Mode

1. Adjust motion sensitivity, or range, by using the slider or the preset buttons.
2. Activate Test Mode to test the range of the motion sensor, day or night, as you make adjustments to the sensitivity. The associated device or group will turn on for a few brief seconds between motion events. Deactivate this mode after choosing the sensitivity that works best for your application.

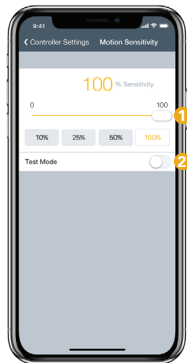


---

## Photocell Sensitivity

1. Adjust the photocell sensitivity by using the slider or the preset buttons.


The motion sensor only activates fixtures at night. Photocell sensitivity determines how dark it needs to be for the motion sensor to begin doing this; choose low sensitivity to have devices wait until it is very dark at night to begin activating, while stopping earlier in the morning at dawn. A high sensitivity will activate the motion sensor as soon as dusk begins, and keep it active until later in the morning.

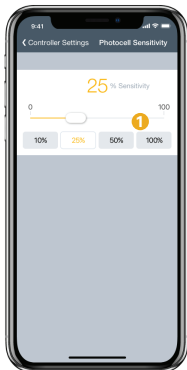

## 8 Setting schedules and creating groups


### Setting up a schedule

1. Tap the “⋮” icon to the right of your device’s name.
2. Tap the calendar icon on the slider. And tap the “+” button.
3. Using the dial, set your desired time.
4. Tap the days of the week that you want the schedule applied to.
5. Tap **“Save”** and give your schedule a unique name.

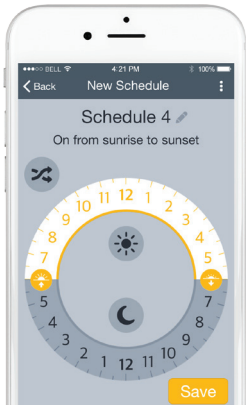

### Creating a group

1. At the top left, press the “=” menu icon and click on Groups to access the new grouping page.
2. Tap the large plus sign in the center of the screen, or in the top right corner, to make your first group. Then enter a unique name for your group and tap **“Done.”**
3. Touch and drag devices from the bottom of the screen towards the top of the screen to add them to your Group. Repeat to add more and press next.
4. After your group is saved, you will be brought to the “Group Settings” menu.

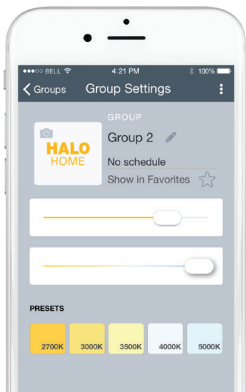

## Troubleshooting

<p>Floodlight or motion sensor are not powering on, or are not visible in the app</p>	<p>The motion floodlight is not powered or it is out of range of your smart device: <b>Ensure the light is receiving power, your Bluetooth is "ON" on your smart device, and you are close by.</b></p>
<p>Floodlight or motion sensor are not visible in the app, or will not pair with the app</p>	<p>There are connectivity issues between the smart device and the light. <b>Try each of the following solutions in this order until the issue is resolved:</b></p> <ul style="list-style-type: none"><li>- On your smart device, turn your Bluetooth off, then on again after 2 seconds;</li><li>- Close and restart the app;</li><li>- Log out of your account, and log back in;</li><li>- Delete the app. Download and reinstall it.</li></ul>
<p>Factory reset required</p>	<p>If the above steps do not resolve the connectivity issue, a factory reset may be required:</p> <ul style="list-style-type: none"><li>- Using the wall switch, turn the fixture off for 3 seconds, then on for 5 seconds, repeating this process 4 times. It may be helpful to use a timer.</li><li>- Once the factory reset is successful, your floodlight will dim down and the motion sensor LED indicator will begin to blink. You are now ready to claim the floodlight and motion sensor as indicated in steps 4 and 5.</li></ul>



## **5-Year Limited Warranty**

THE FOLLOWING WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING, BUT NOT LIMITED TO, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE.

Eaton warrants to customers that, for a period of five years from the date of purchase, Eaton products will be free from defects in materials and workmanship. The obligation of Eaton under this warranty is expressly limited to the provision of replacement products. This warranty is extended only to the original purchaser of the product. A purchaser's receipt or other proof of date of original purchase acceptable to Eaton. This is required before warranty performance shall be rendered. This warranty does not apply to Eaton products that have been altered or repaired that have been subjected to neglect, abuse, misuse or accident (including shipping damages). This warranty does not apply to products not manufactured by Eaton which have been supplied, installed, and/or used in conjunction with Eaton products. Damage to the product caused by replacement bulbs or corrosion or discoloration of brass components are not covered by this warranty.

### **LIMITATION OF LIABILITY:**

IN NO EVENT SHALL EATON BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (REGARDLESS OF THE FORM OF ACTION, WHETHER IN CONTRACT, STRICT LIABILITY, OR IN TORT INCLUDING NEGLIGENCE), NOR FOR LOST PROFITS; NOR SHALL THE LIABILITY OF EATON FOR ANY CLAIMS OR DAMAGE ARISING OUT OF OR CONNECTED WITH THESE TERMS OR THE MANUFACTURE, SALE, DELIVERY, USE, MAINTENANCE, REPAIR OR MODIFICATION OF EATON PRODUCTS, OR SUPPLY OF ANY REPLACEMENT PARTS THEREFORE, EXCEED THE PURCHASE PRICE OF EATON PRODUCTS GIVING RISE TO A CLAIM. NO LABOR CHARGES WILL BE ACCEPTED TO REMOVE OR INSTALL FIXTURES.

To obtain warranty service, please contact Eaton, at 1-800-334-6871, press option 2 for Customer Service, or via e-mail

ConsumerProducts@eaton.com and include the following information:


- Name, address and telephone number
- Date and place of purchase
- Catalog and quantity purchase
- Detailed description of problem

All returned products must be accompanied by a Return Goods Authorization Number issued by the Company and must be returned freight prepaid. Any product received without a Return Goods Authorization Number from the Company will be refused. Eaton is not responsible for merchandise damaged in transit. Repaired or replaced products shall be subject to the terms of this warranty and are inspected when packed. Evident or concealed damage that is made in transit should be reported at once to the carrier making the delivery and a claim filed with them. Reproductions of this document without prior written approval of Eaton are strictly prohibited.





# App Features

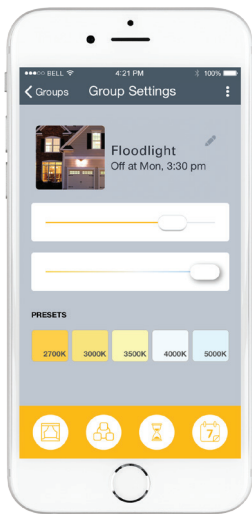

On/Off/Dim



Grouping



Scheduling



Timed Scenes



Adjustable Color  
Temperature (3000K - 5000K)



Search for "Halo Home" in your app store.



**Note:** System limits user to 200 products, 10 scenes, 10 groups and 10 schedules.

# Mix and match Halo Home products to personalize your lighting.



Halo LED module



Halo LED Floodlight



Internet access bridge



Anywhere bluetooth dimmer switch



See more products at [eaton.com/halohome](http://eaton.com/halohome)

**Eaton**  
1121 Highway 74 South  
Peachtree City, GA 30269  
T: 800-334-6871  
[www.eaton.com/lighting](http://www.eaton.com/lighting)

© 2018 Eaton  
Tous droits réservés  
Imprimé en Chine  
Publication No IB518107FR  
April 6, 2018 2:34 PM

© 2018 Eaton  
Todos los derechos reservados  
Impreso en China  
Publicación n.º IB518107EN  
April 6, 2018 2:34 PM

**EATON**



Eaton es una marca registrada.  
Todas las marcas registradas  
son propiedad de  
sus respectivos propietarios.

La disponibilité du produit, les  
spécifications et les conformités  
peuvent être modifiées sans  
préavis.

La disponibilidad del producto,  
las especificaciones y el  
cumplimiento están sujetos a  
cambios sin previo aviso.